

AXSWC Dual Assignment (long button press)

The **AXSWC** interface has the capability to assign (2) functions to a single button except for **Volume Up** and **Volume Down**, after the interface has been programmed and is fully functional. This feature can be performed by either following the steps below, through a Windows based computer using the **Axxess Updater**, or through the **Axxess Updater** app available from the Android/Apple mobile devices app store.

Notes:

- a) Seek Up and Seek Down come pre-programmed as Preset Up and Preset Down for a long button press.
- b) Apple mobile devices will require the use of the **AXHUB-1** for this feature.

Attention! If more than 10 seconds elapses between steps, the procedure will abort, and the light in the interface will go out. The interface may not function properly and may need to be reset and reprogrammed.

- 1. Program the interface to the vehicle following the vehicle specific document.
- 2. Turn the radio off.
- **3.** Cycle the key off, then back on.
- **4.** Wait until the light flashes **Green** 1 time then goes out.
- 5. Press and hold the desired SWC button for dual assignment for 10 seconds (or until the light flashes rapidly **Green**), then release. The light will turn solid **Green** indicating the interface is in **Dual Assignment** mode.
- 6. Reference the Dual Assignment Legend. Press and release the Volume Up button on the steering wheel the number of times related to the desired feature for a long button press.
- 7. Press and release the SWC button from step 5. The light will go out indicating the information has been stored to memory.
- **8.** Repeat from step 5 to select another SWC button for dual assignment.
- 9. To reset an SWC button back to its default state, repeat steps 3 and 4, then press and release the **Volume Down** button on the steering wheel. The light will go out, and the dual assignment feature for that button will be erased.

Dual Assignment Legend

Function #	Function	Function #	Function
1	Volume Up *	10	Band
2	Volume Down *	11	Play / Enter
3	Seek Up / Next	12	PTT
4	Seek Down / Previous	13	On Hook
5	Mode / Source	14	Off Hook
6	ATT / Mute	15	Fan Up *
7	Preset Up	16	Fan Down *
8	Preset Down	17	Temp Up *
9	Power	18	Temp Down *

^{*} Not applicable in this application