



## Replacement Auxiliary Light with Halo and Turn Signal

The headlight replacements come with a H4 connector. This connector contains, both high and low beam connections, and a common ground.

To use the DRL function, connect the DRL wire to a switched +12V source, such as an accessory or ignition circuit. The DRL halo will illuminate when this circuit is activated.

Single Headlight: Connect the Turn Signal wire to both the left and right angled +12V turn signal light sources. You MUST diode isolate the connection to these sources.

Dual Headlight: Connect the Turn Signal wire to the +12V source for the turn signal light for that side of the bike.

