



## Replacement Headlight

with Partial Halo and  
Turn Signal

The headlight replacements come with a H4 connector. This connector contains, both high and low beam connections, and a common ground.

To use the DRL function, connect the DRL wire to a switched +12V source, such as an accessory or ignition circuit. The DRL halo will illuminate when this circuit is activated. Connect the Turn Signal wire (Left) to the +12V source for the left turn signal light, and connect the Turn Signal wire (Right) to the +12V source for the right turn signal light.

