

# LED HEADLIGHT REPLACEMENT BULBS PRO SERIES



**SINGLE**



**DUAL**



**HID**

Remove factory bulb

Install new bulb


1



*\*Lock mechanism may be different depending on model*

Apply double sided tape

2

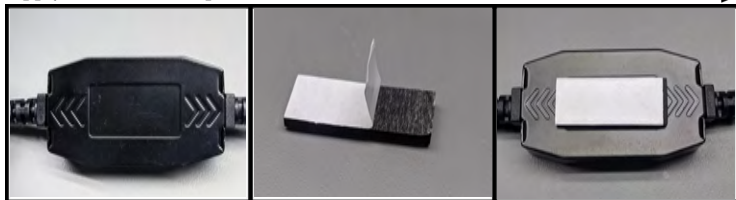

3



Make connection

**SEE REVERSE FOR  
PATTERN ADJUSTMENT**


# PATTERN ADJUSTMENT

(1) Loosen the set screw just enough so that the bulb can be rotated

*\*some models do not have a set screw*



(2) Set vehicle on a level surface, 10 feet back from a wall or garage door

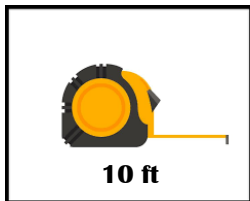

(3) Turn the bulb and watch the pattern on the wall change.



(4) When the pattern becomes crisp, with a sharp top line and no hot spots in the field stop rotating



(5) Re-tighten the set screw



Visit us online for full installation videos



386.257.2956 • [HeiseLED.com](http://HeiseLED.com)