



Position the on/off switch to "ON". Press and release the push button to change the light pattern.

PATTERN	HEAD 1	HEAD 2	HEAD 3	HEAD 4	LED HEAD SEQUENCE
1	STEADY	STEADY	STEADY	STEADY	ALL
2	STEADY	STEADY	OF	OF	CONTINUOUS
3	OF	OF	STEADY	STEADY	CONTINUOUS
4	OF	OF	OF	OF	ALL
5	SF	SF	SF	SF	1&2 / 3&4 ALTERNATE
6	OF	OF	OF	OF	ALL
7	TF	TF	TF	TF	ALL
8	TF	TF	TF	TF	1&2 / 3&4 ALTERNATE
9	TF	TF	TF	TF	ALL
10	SF	SF	SF	SF	ALL FAST
11	SF	SF	SF	SF	ALL
12	OF	OF	OF	OF	1&2 / 3&4 ALTERNATE
13	SF-TF	SF-TF	SF-TF	SF-TF	3-SINGLE FLASHES THEN 3 TRIPLE FLASHES ALTERNATE
14	SF-TF	SF-TF	SF-TF	SF-TF	3-SINGLE FLASHES THEN 3 TRIPLE FLASHES ALTERNATE
15	STF	STF	STF	STF	1&2 / 3&4 ALTERNATE

DESCRIPTION OF LIGHT PATTERN

SF	SINGLE FLASH
DF	DOUBLE FLASH
TF	THRIPLE FLASHES
QF	QUAD FLASH
STEADY	NO FLASH
STF	SLOWTOFAST