



TE-LPCB

Product Manual



800.221.0932
iBeamUSA.com
460 Walker Street, Holly Hill, FL 32117



TE-LPCB

Product Manual



800.221.0932
iBeamUSA.com
460 Walker Street, Holly Hill, FL 32117


I. Specifications

SENSOR	CMOS II
Effective Pixel	656 X 492
Horizontal Sync Frequency	15625KHZ
Vertical Sync Frequency	PAL50HZ / NTSC 60HZ
Scanning System	2 : 1 Interlace
Sync System	Internal
AGC	Auto
BLC	Auto
Resolution	420 TV Lines
S/N Ratio	More Than 48dB
Current Consumption	No More 150mA
Power Supply	DC12V ± 10%
Operating Temperature	-22° ~ 176° F
Storage Temperature	-40° ~ 176° F
Viewing Angle	170°
Water-Proof	IP67
Minimum Illumination	0.5Lux/F1.2(0Lux with LED)

I. Specifications

SENSOR	CMOS II
Effective Pixel	656 X 492
Horizontal Sync Frequency	15625KHZ
Vertical Sync Frequency	PAL50HZ / NTSC 60HZ
Scanning System	2 : 1 Interlace
Sync System	Internal
AGC	Auto
BLC	Auto
Resolution	420 TV Lines
S/N Ratio	More Than 48dB
Current Consumption	No More 150mA
Power Supply	DC12V ± 10%
Operating Temperature	-22° ~ 176° F
Storage Temperature	-40° ~ 176° F
Viewing Angle	170°
Water-Proof	IP67
Minimum Illumination	0.5Lux/F1.2(0Lux with LED)

II. Connection

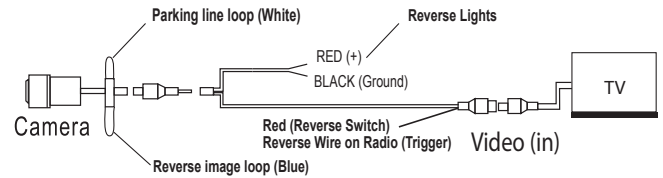


- 1) Find a suitable location to surface mount install the camera. Make sure the camera's view is unobstructed and be careful not to drill into any wires that might damage the vehicle, also insure you have enough depth for install. When all connections have been made and before mounting the camera, verify the camera is working and has good view of the area.
- 2) There are two mounting pieces for camera's base, one flat and one angled. Determine which base is needed for install for this will change the camera's viewing angle.
- 3) Camera should be installed in the upward position (cable facing up), Use a 3/8" bit to drill a hole for surface mounting of camera. Screw base to surface, run cable though base then snap camera into base.
- 4) Connect the RED wire to the +12 volt reverse wire.
- 5) Connect the BLACK wire to ground (a metal, non-painted surface).
- 6) Run video cable though vehicle, up to video display. (Avoid placing video cable where it can get pinched or damaged).
- 7) Attach the YELLOW video rca to the reverse camera input of the radio or video display; connect the RED wire coming from the YELLOW video rca to the reverse trigger wire on the radio or video display.

NOTE: The camera comes with the parking assist lines and a normal image view active. If you want to remove the parking lines or change the image to reverse image, follow the steps below:

- A) Disconnect power to the camera
- B) Cut the WHITE loop to remove the parking assist lines, isolate and tape the wires
- C) Cut the BLUE loop to reverse the image, isolate and tape the wires
- D) Reconnect power to the camera

II. Connection

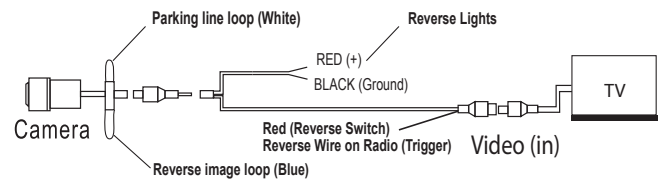

- 1) Find a suitable location to surface mount install the camera. Make sure the camera's view is unobstructed and be careful not to drill into any wires that might damage the vehicle, also insure you have enough depth for install. When all connections have been made and before mounting the camera, verify the camera is working and has good view of the area.
- 2) There are two mounting pieces for camera's base, one flat and one angled. Determine which base is needed for install for this will change the camera's viewing angle.
- 3) Camera should be installed in the upward position (cable facing up), Use a 3/8" bit to drill a hole for surface mounting of camera. Screw base to surface, run cable though base then snap camera into base.
- 4) Connect the RED wire to the +12 volt reverse wire.
- 5) Connect the BLACK wire to ground (a metal, non-painted surface).
- 6) Run video cable though vehicle, up to video display. (Avoid placing video cable where it can get pinched or damaged).
- 7) Attach the YELLOW video rca to the reverse camera input of the radio or video display; connect the RED wire coming from the YELLOW video rca to the reverse trigger wire on the radio or video display.

NOTE: The camera comes with the parking assist lines and a normal image view active. If you want to remove the parking lines or change the image to reverse image, follow the steps below:

- A) Disconnect power to the camera
- B) Cut the WHITE loop to remove the parking assist lines, isolate and tape the wires
- C) Cut the BLUE loop to reverse the image, isolate and tape the wires
- D) Reconnect power to the camera