



### Steering Wheel Controls With New JVC & Kenwood Radios

- Locate the main connector on the back of the radio. These radios use an ISO/EURO (1784 shell) radio connector. (Figure A)
- The SWC wire from the radio can be found in the bundle of wires above the main connector, labeled **REMOTE CONT.** (Figure B)
- This installation step will require a **10k ohm ¼ watt resistor** (sold separately). (Figure C)

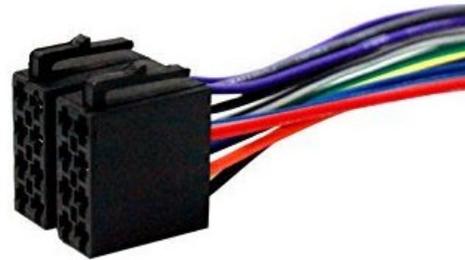

(Figure A)

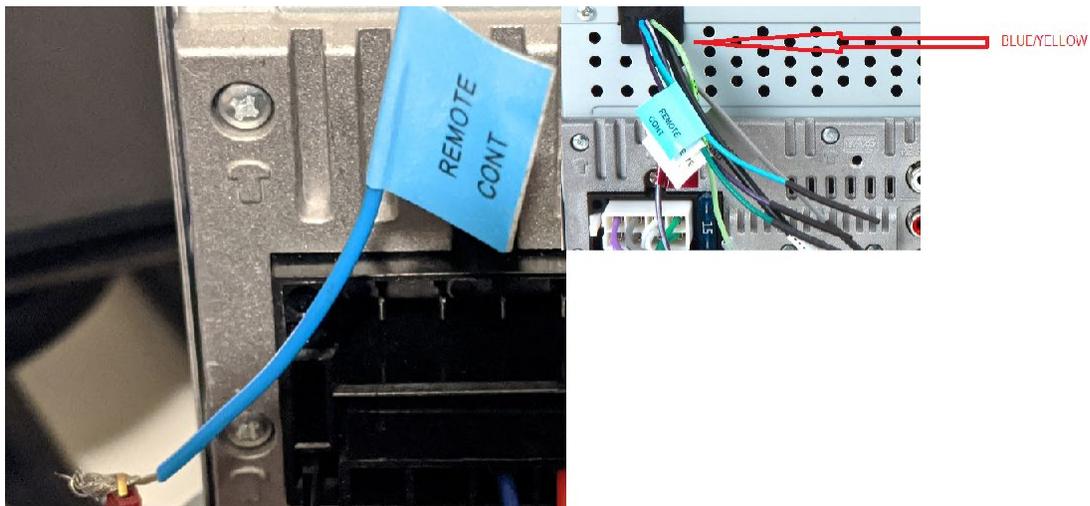

(Figure B)




(Figure C)

### Installation Instructions

1. Connect one end of the resistor to the **Blue/Yellow** wire from the radio. Connect the other end of the resistor to the **Brown** wire from 3.5mm adapter included with the AXSWC. (Figure A)
2. Proceed with programming the steering wheel controls. Once the AXSWC interface shows the correct radio (5 LED flashes), remove the resistor.
3. Reconnect the **Blue/Yellow** and **Brown** wires without the resistor in place. (Figure B)
4. Test the steering wheel controls for proper functionality.
5. The installation is now complete.



(Figure A)

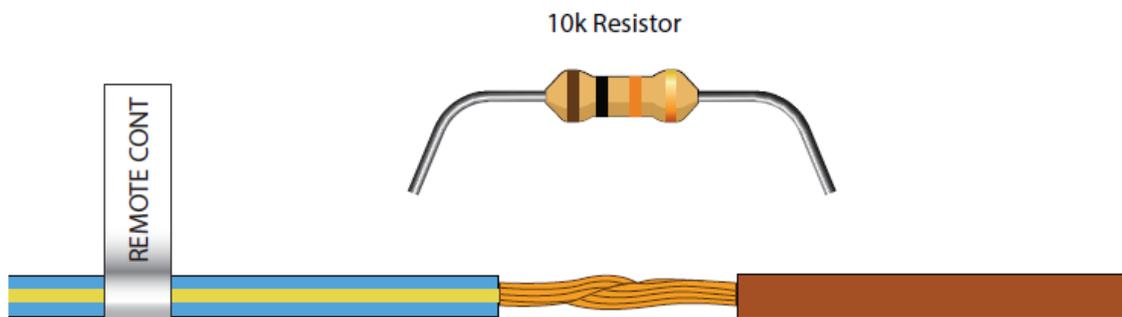

(Figure B)

