



Fits Honda Ridgeline (with factory NAV) 2005-2014

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications

KIT FEATURES

- Stereo installation kit designed to fit any standard 4" tall (Double-DIN) aftermarket radio or ISO Single-DIN radio provision with pocket (sold separately, part number 88-00-9004)
- Painted scratch-resistant matte black
- Made from the highest quality ABS plastic for an original factory-like fit and finish

KIT COMPONENTS

- A) Radio housing • B) Radio brackets • C) Pocket • D) Pocket brackets • E) Keps nuts (2) • F) Carriage bolts (2) • G) Phillips screws (4)

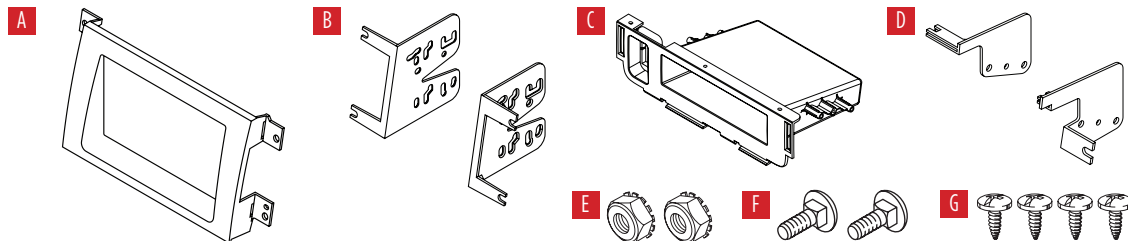


TABLE OF CONTENTS

Dash Disassembly	2
Kit Assembly	3

WIRING & ANTENNA CONNECTIONS (sold separately)

- Wiring Harness: 70-1721 — 1998-2008
 • 70-1729 — 2009-2014
 Antenna Adapter: 40-HD10


TOOLS REQUIRED

- Small flat blade screwdriver
- Phillips screwdriver


Attention! With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.

DASH DISASSEMBLY

1. Unclip and remove entire panel surrounding radio and a/c control all the way over to left side of steering wheel. (Figure A)
2. Remove (5) Phillips screws securing the radio and pocket assembly. (Figure B)

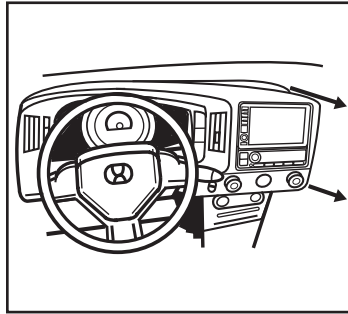


(Figure A)

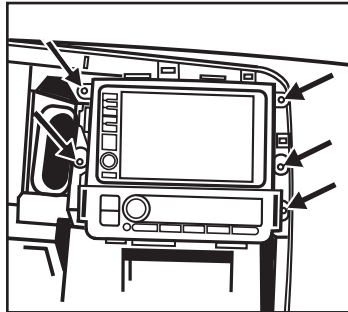


(Figure B)

3. Remove (2) Phillips screws (1 per side) securing factory pocket to radio/pocket bracket assembly. (Figure C, D)
4. Remove the Hazard/Airbag button from the factory radio panel and set aside for kit assembly.

Continue to Kit Assembly

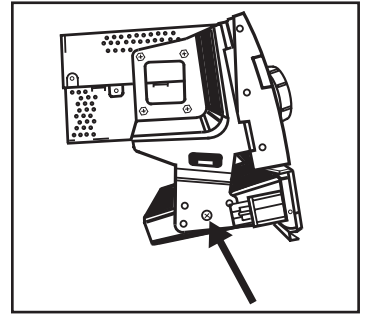


(Figure C)

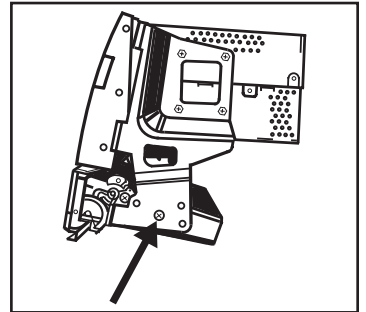


(Figure D)

KIT ASSEMBLY


1. Attach the **pocket brackets** to the **radio housing** using the included carriage bolts and Keps nuts. (Figure A)
2. Position the **pocket** into the assembled radio housing/pocket assembly and secure with the included hardware to mount pocket (not factory). (Figure B)
3. Slide the **radio brackets** into the **radio housing**, aligning the slots in the **radio housing** with the tabs on the **radio brackets**. (Figure C)

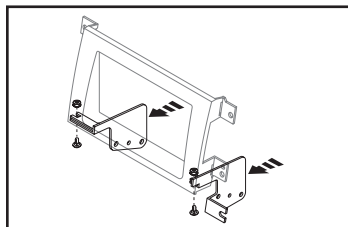

(Figure A)

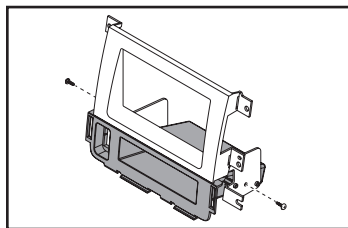


(Figure B)

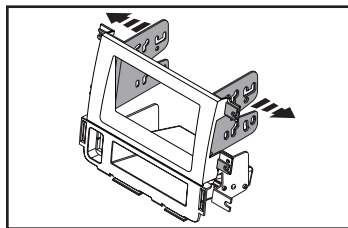


(Figure C)

4. Slide the radio into the completed assembly and secure it using screws supplied with the radio. (Figure D)
5. Install the Hazard/Airbag button removed during dash disassembly into the **pocket**. (Figure E)
6. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXCESS.
7. Mount the new radio assembly into the dash and reassemble the dash in reverse order of disassembly.

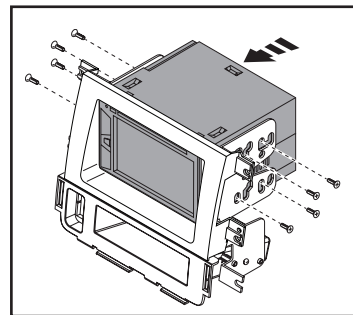

(Figure D)

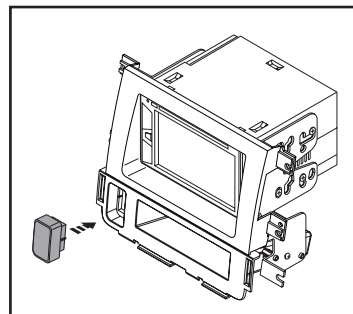

(Figure E)



95-7884B
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**