



Hyundai Elantra 2014-2016 Hyundai Elantra Coupe 2013-2014

Visit MetraOnline.com for more detailed information about the product and up-to-date vehicle specific applications


KIT FEATURES

- ISO DIN radio provision with pocket
- Painted black to match factory finish


KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (4) #8 x 3/8" Truss-head Phillips screws


A

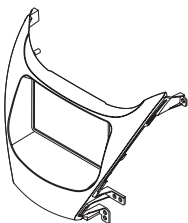

B

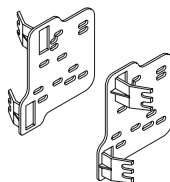

C

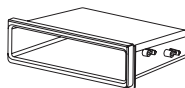

D



TABLE OF CONTENTS

Dash Disassembly	2
Kit Assembly	3

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: 70-7304 • AX-HYKIA1-SWC
& AX-HYKIA-SPDIF (for amplified models)

Antenna Adapter: Not required

TOOLS REQUIRED


- Panel removal tool • Phillips screwdriver

Attention! With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.


DASH DISASSEMBLY

1. Remove trim panels from each side of center console. (Figure A)
2. Remove (4) Phillips screws from radio trim panel. Gently pry radio trim panel from dash. (Figure B)
3. Remove (4) Phillips screws securing radio chassis to sub dash. (Figure C)


Continue to Kit Assembly

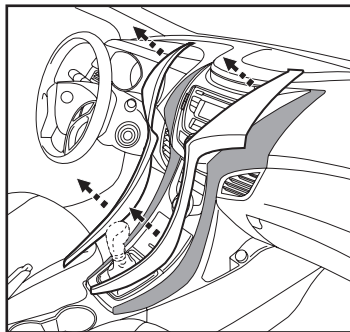

(Figure A)

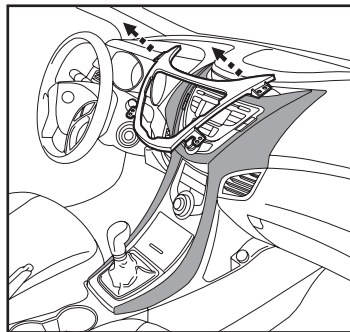


(Figure B)

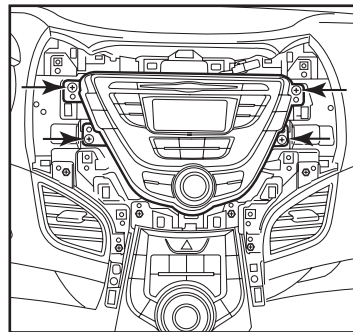


(Figure C)

KIT ASSEMBLY


1. Secure the **radio brackets** to the **pocket** with the (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Secure the radio to the bracket/pocket assembly with the screws included with the radio. (Figure B)
3. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
4. Secure the assembly into the sub dash. (Figure C)
5. Reassemble dash in reverse order of disassembly using the **radio trim panel** instead of factory panel. (Figure C)

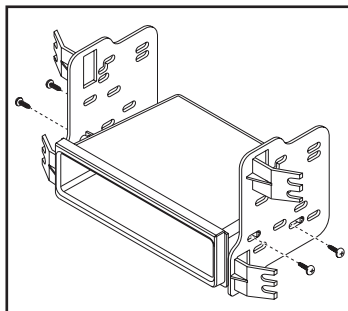

(Figure A)

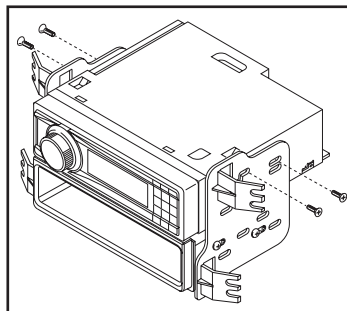

(Figure B)

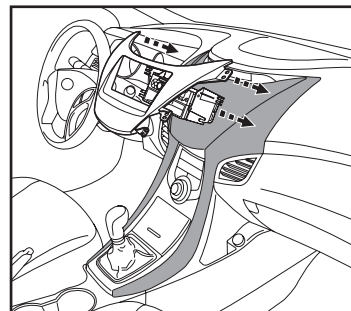

(Figure C)



99-7362B
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.edu or call 386-672-5771 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**



Hyundai Elantra 2014-2016 Hyundai Elantra Coupe 2013-2014

Visite MetraOnline.com para más información acerca del producto y las aplicaciones específicas más actualizadas del vehículo


CARACTERÍSTICAS DEL KIT

- Provisión de radio ISO DIN con cavidad
- Pintada en negro para igualar el acabado de fábrica


COMPONENTES DEL KIT

- A) Panel de moldura para radio • B) Soportes de radio • C) Cavidad • D) (4) Tornillos Phillips de cabeza segmentada #8 x 3/8"


A

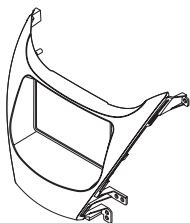

B

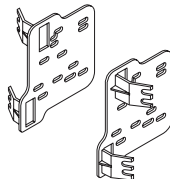

C

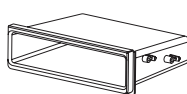

D



INDICE

Desmontaje del tablero	2
Ensamble del kit	3

CABLEADO Y CONEXIONES DE ANTENA

(se venden por separado)

Arnés de cables: 70-7304 • AX-HYKIA1-SWC
y AX-HYKIA-SPDIF (para modelos amplificados)

Adaptador de antena: No se requiere

HERRAMIENTAS REQUERIDAS


- Herramienta para quitar paneles
- Destornillador Phillips

¡Atención! Con la llave fuera del encendido, desconecte el terminal negativo de la batería antes de instalar este producto. Asegúrese de que todas las conexiones de la instalación estén seguras antes de encender y apagar el encendido para probar este producto.


DESMONTAJE DEL TABLERO

1. Quite los paneles de la moldura desde cada lado de la consola central. (Figura A)
2. Quite los (4) tornillos Phillips del panel de la moldura del radio. Quite con cuidado el panel de la moldura del radio del tablero. (Figura B)
3. Quite los (4) tornillos Phillips que sostienen el chasis del radio al sub tablero. (Figura C)


Continúe con el Ensamble del Kit

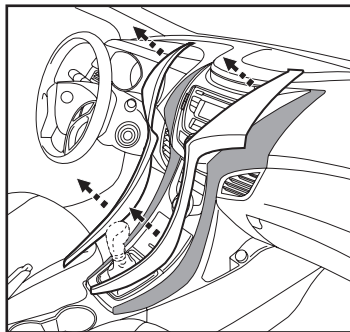

(Figura A)

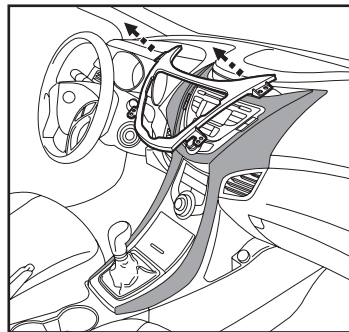


(Figura B)

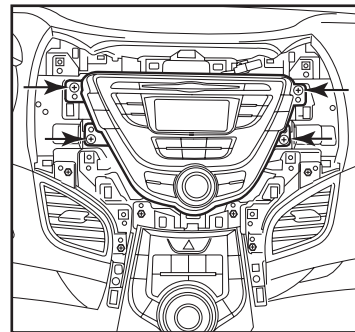


(Figura C)

ENSAMBLE DEL KIT


1. Atornille los **soportes del radio** en la **cavidad** con los (4) tornillos Phillips #8 x 3/8" suministrados. (Figura A)
2. Sujételo la radio en el ensamble soporte/cavidad con los tornillos incluidos con el radio. (Figura B)
3. Ubique el arnés de cableado de fábrica y el conector de la antena en el tablero. Metra recomienda el uso de adaptadores adecuados de acoplamiento de Metra y/o de AXXESS. (Figura C)
4. Sujételo el ensamble en el sub tablero.
5. Vuelva a armar el tablero en orden inverso al desensamble, usando el **panel de moldura de radio** en lugar del panel de fábrica.

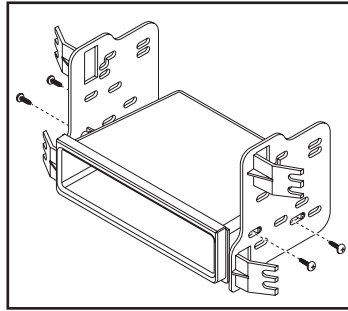

(Figura A)

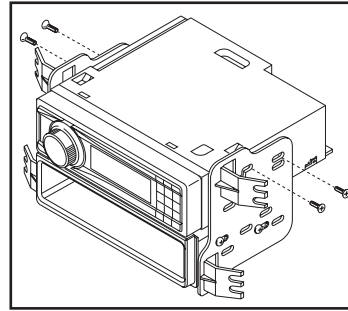

(Figura B)

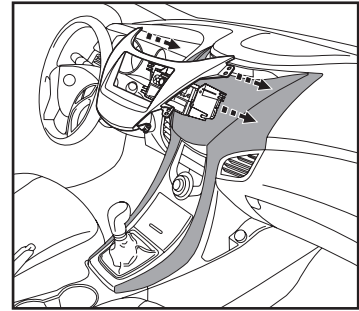

(Figura C)



99-7362B
INSTRUCCIONES DE INSTALACIÓN



¿Tienes dificultades? Estamos aquí para ayudar.



Póngase en contacto con nuestra
línea de soporte técnico en:
386-257-1187



O por correo electrónico a:
techsupport@metra-autosound.com

Horas de soporte técnico (hora estándar del este)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by
enrolling in the most recognized and respected
mobile electronics school in our industry.
Log onto www.installerinstitute.edu or call
386-672-5771 for more information and take steps
toward a better tomorrow.



**Metra recomienda MECP
técnicos certificados**