



## Active Noise Canceling Bypass Harness Fits Select GM Models 2020-2022

Visit [AxxessInterfaces.com](http://AxxessInterfaces.com) for more detailed information about the product and up-to-date vehicle specific applications

- Active noise canceling bypass harness
- Fits 2020-2022 GM vehicles with ANC audio systems, in a variety of RPOs
- Enhances sound quality during audio system upgrades
- Eliminates unwanted ANC interference for complete sound customization
- Protects vehicle electronics
- Quality connectors
- Always check vehicle warranty before altering the audio system to prevent voiding coverage

This **Active Noise Canceling Bypass Harness** is an OE module that helps reduce unwanted background noise. Microphones mounted throughout the vehicles are used to monitor sound levels and frequencies inside the vehicle's cabin. The factory ANC generates an inverted signal from the factory speakers to cancel out unwanted cabin noise.

It is recommended that the RPO code is double check to confirm application. The RPO Codes can be found on a placard labeled "**Service Parts Identification**" in the glove box, on the trunk floor or inside the driver's door panel.



3GNAXKEV3 [REDACTED],20,1XR26,02,20,X  
,XKWTVB, AG1 AG6 AR9 AXP AY0 CNQ  
C4P DLF D31 EF7 FE9 FE9 FJW FWD GB8  
GNA GND H1 [REDACTED] UQA 20 J60 LYX MAH MNH  
NB5 NTB N52 RJA RSB SJF SPM TB4 UDD  
UZ6 U2K V8D WML ZP5 1LT 1LT 4AA 5CX  
6X1 7X1 8X2 9X2,384A,,,

### TABLE OF CONTENTS

ANC Plug Locations & Installation .....	2-5
Corvette .....	2
Suburban/ Tahoe .....	3
Bypassing ANC .....	4

### KIT COMPONENTS

- ANC-GMH2 Wiring Harness

### APPLICATIONS

Make	Model	Year Range
<b>Chevrolet</b>	Corvette .....	2020-2022
	Suburban .....	2021-2022
	Tahoe.....	2021-2022

**NOTE: BOSE** is the qualifier for each application listed above

*ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.*

*NOTE: Refer also to the instructions included with the aftermarket accessory before installing this device.*

## ANC PLUG LOCATIONS & INSTALLATION: CORVETTE 2020-2022

### ACTIVE NOISE CANCELING (ANC) MICROPHONES

#### CORVETTE 2020-2022

without Audiophile System

RPO Codes: UQS

#### CORVETTE 2020-2022

with Audiophile System (UNPLUG 20 pin connector at amp)

RPO Codes: UQH


**Important Note:** DO NOT PLUG the ANC bypass into any factory module other than the location mentioned below.

The ANC system operates when certain conditions are met:


- The amplifier has passed all self-diagnostic checks
- All doors are closed
- Battery voltage is between 9.5 V and 16 V
- The vehicle cabin temperature is less than 140°F (60°C)
- Engine speed is between 550 and 3000 RPM

To bypass the ANC pull back the carpet from the passenger side foot well exposing the metal cover panel. Remove bolt and panel to gain access to the amplifier.

Simply unplug the OE connector from the AMP/ANC module and plug the T-harness inline. Your ANCs have been bypassed.

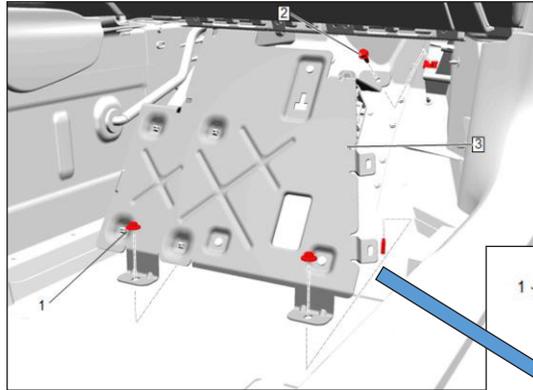

### AMP/ANC Location

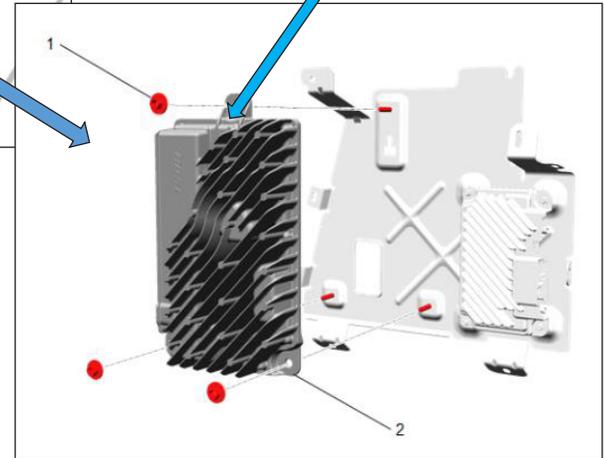

## ANC PLUG LOCATIONS & INSTALLATION: SUBURBAN/TAHOE 2021-2022

### ACTIVE NOISE CANCELING (ANC) MICROPHONES SUBURBAN/TAHOE 2021-2022

#### SUBURBAN

##### RPO Codes : UQP, UQS

with Surround Amplifier/without Performance Audio  
and  
with Surround Amplifier/with Performance Audio

#### TAHOE

##### RPO Codes : UQA, UQS, UQP


with Surround Amplifier/without Performance Audio

**Important Note:** DO NOT PLUG the ANC bypass into any factory module other than the location mentioned below. The ANC system operates when certain conditions are met:

- The amplifier has passed all self-diagnostic checks
- All doors are closed
- Battery voltage is between 9.5 V and 16 V
- The vehicle cabin temperature is less than 140°F (60°C)
- Engine speed is between 550 and 3000 RPM

To bypass the ANC remove the Rear Left Side Quarter Panel to gain access to the amplifier.

Simply unplug the OE connector from the AMP/ANC module and plug the T-harness inline. Your ANCs have been bypassed.

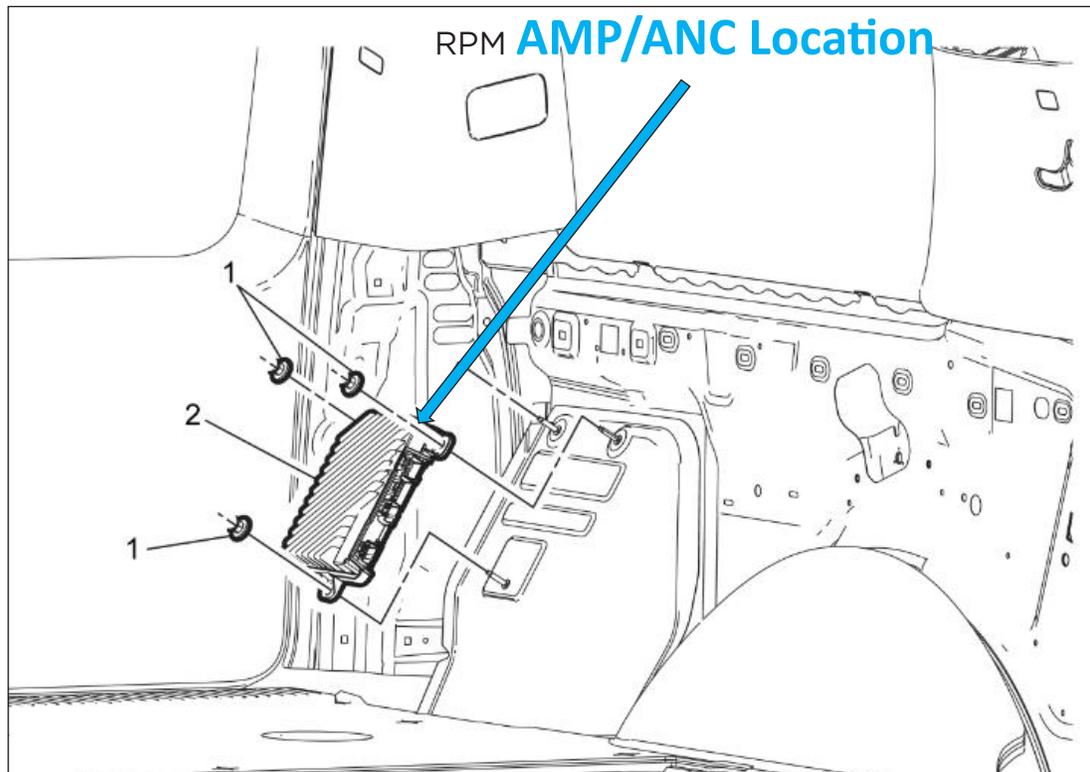



## BYPASSING ANC

In some amplified vehicles the ANC module is inside the factory amplifier(s).



Having difficulties? We're here to help.



Contact our Tech Support line at:  
**386-257-1187**



Or via email at:  
techsupport@metra-autosound.com

### Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



Metra recommends MECP  
certified technicians