

Jeep Renegade 2015-2017

Bluetooth Capable Vehicle Customization

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications



INTERFACE COMPONENTS

- AX-CUSTOM-BT interface
- AX-CUSTOM-BT wiring harness

INTERFACE FEATURES

- Allows retention and adjustment of the factory personalization menu
- Adjust the personalization menu through a Bluetooth application
- Smartphone application offering full control from either an Android or Apple mobile device

TABLE OF CONTENTS

Connections.....	2
App instructions.....	3

TOOLS REQUIRED

- Crimping tool and connectors, or solder gun, solder, and heat shrink
- Tape
- Wire cutter
- Zip ties

Attention! Let the vehicle sit with the key out of the ignition for a few minutes before removing the factory radio. When testing the aftermarket equipment, ensure that all factory equipment is connected before cycling the key to ignition.

CONNECTIONS


- Connect the (2) **Black** wires to chassis ground.
- Connect the (2) **Yellow** wires to battery power.
- Connect the (2) **Red** wires to accessory power.
- Connect the **Pink** wire to the vehicles CAN-HI wire. (Figure A) †
- Connect the **Blue/Pink** wire to the vehicles CAN-LO wire. (Figure A) †

Note: Only use the **Blue/Pink** wire in the top right. (Figure B)


- Tape off and disregard the following (8) wires, they will not be used in this application:
Blue/White, Green/Purple, Light Green, Orange, White/Green, White/Red

† If also installing an Axxess interface, these wires can be tapped to the wiring harness from the Axxess interface, at the main harness connected to the vehicle. Wire colors will match accordingly.

Note: Color instructions available online.

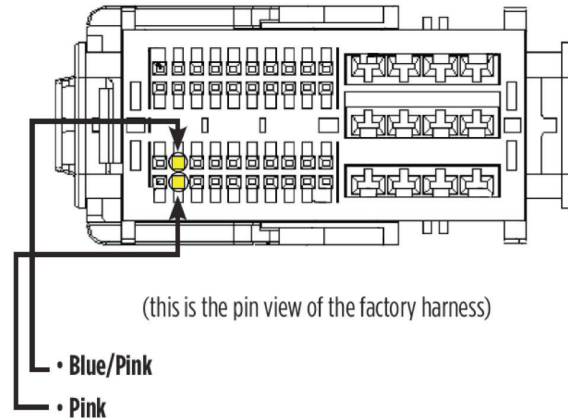


(Figure A)

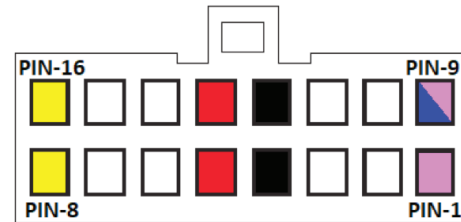

(Figure B - Insertion View)

APP INSTRUCTIONS

1. Download and install the AX-CUSTOM-BT app from the Android/Apple mobile devices app store.
2. Start the vehicle.
3. Open the app and wait for the **Customization Settings** menu to appear. If **Not Connected** appears instead, press the right button in the top right corner of the screen, then press the left button in the top right corner of the screen to go back to **Customization Settings**. The pairing process will begin at this point.
4. Once paired, **Settings** will be displayed in the screen. From this point on you can make changes to the vehicle as desired, as long as the vehicle is on. (Figure A)

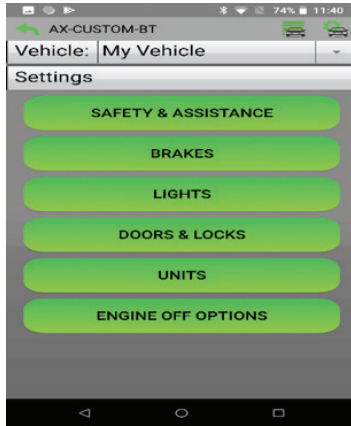

(Figure A)


Note: Screenshot shown for illustration only. Actual options available vary per vehicle and trim level.

Manage Vehicles


1. Select **Manage Vehicles** by pressing the button in the top right of the screen.
2. Pressing either the **Add Vehicle** or **Edit** (pencil icon) button will open the **Configure Vehicle** menu. (Figure B)

Configure Vehicle (Figure C)

- The name of the vehicle can be changed by pressing the text field.
- The app can automatically detect the interface installed in the vehicle by pressing the **Search** button (magnifying glass).
- The **Make** and **Model** fields will open a drop down list for the user to select the make and model of the vehicle that the interface is installed in.
- Press the **Save** button to store the changes.

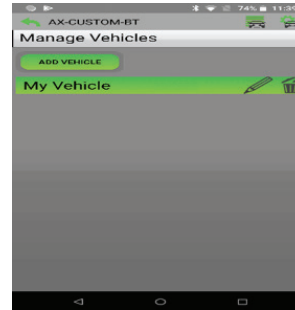

(Figure B)

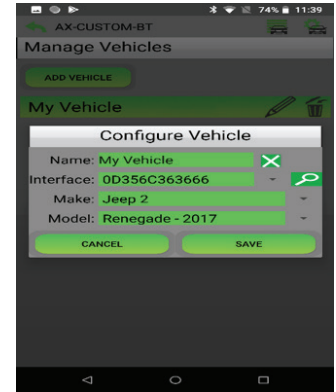

(Figure C)



AX-CUSTOM-BT

INSTALLATION INSTRUCTIONS



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians