Data Interface
Fits Select GM Models **2001-2002**

FEATURES

- Designed for non-amplified systems or bypassing a factory amplifier
- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides NAV outputs (parking brake, reverse, speed sense)
- NOT pre-wired for Axxess SWC interface
- Designed for vehicles without, or not retaining, OnStar®
- Retains factory chimes
- Retains all warning chimes through onboard speaker
- Retains balance & fade
- High-level speaker input
- Micro "B" USB updatable

www.MetraOnline.com

MetraOnline.com may be used to assist with dash assembly instructions. Simply enter your Year, Make, Model vehicle into the vehicle fit guide and look for the Dash Kit Installation Instructions.

COMPONENTS

- AXDI-GM4 interface
- LD-LCGM-04 harness

APPLICATIONS

Oldsmobile
Aurora...2001-2002
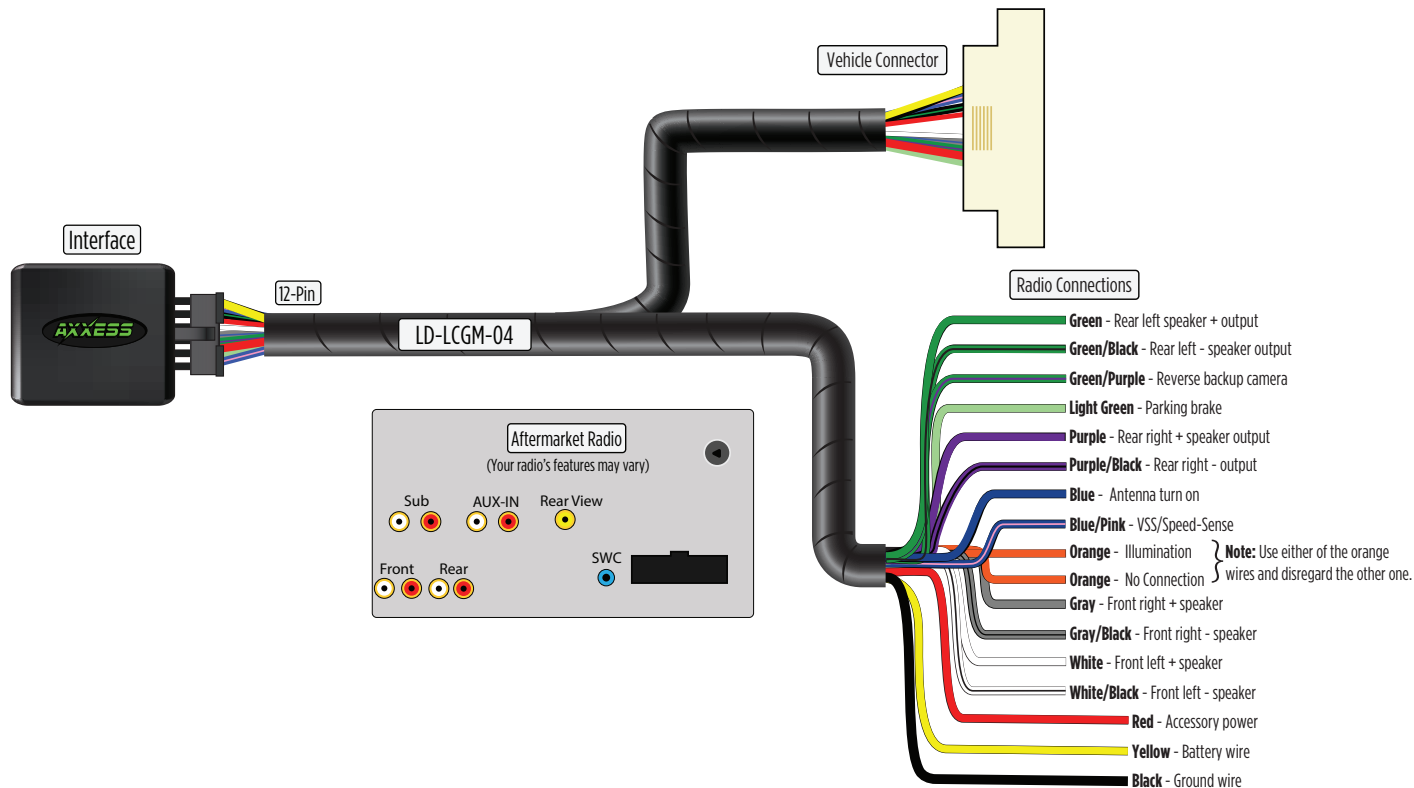
TABLE OF CONTENTS

TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Cutting tool • Tape • Crimping tool
- Connectors (i.e. butt-connectors, bell caps, etc.)

Visit **AxxessInterfaces.com**
for more detailed information about the product and up-to-date vehicle specific applications

ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product. NOTE: Refer also to the instructions included with the aftermarket accessory before installing this device.

CONNECTIONS: LD-AXDI-GM4 DIAGRAM

Vehicle Connector

Interface

12-Pin

LD-LCGM-04

Aftermarket Radio
(Your radio's features may vary)

Sub   AUX-IN   Rear View

Front   Rear

SWC

Radio Connections

Green - Rear left speaker + output
Green/Black - Rear left - speaker output
Green/Purple - Reverse backup camera
Light Green - Parking brake
Purple - Rear right + speaker output
Purple/Black - Rear right - output
Blue - Antenna turn on
Blue/Pink - VSS/Speed-Sense
Orange - Illumination
Orange - No Connection
Gray - Front right + speaker
Gray/Black - Front right - speaker
White - Front left + speaker
White/Black - Front left - speaker
Red - Accessory power
Yellow - Battery wire
Black - Ground wire

Note: Use either of the orange wires and disregard the other one.

INSTALLATION

With the key in the off position:

- Connect the **LD-LCGM-04** harness into the interface, and then to the wiring harness in the vehicle.

PROGRAMMING

Attention! If the interface loses power for any reason, the following steps will need to be performed again. If installing an Axxess SWC interface, connect it after you initialize and test the interface/radio, with the key in the off position.

- Turn the key (or push-to-start button) to the ignition position and wait until the radio comes on.

    Note: If the radio does not come on within 60 seconds, turn the key to the off position, disconnect the interface, check all connections, reconnect the interface, and then try again.

- Turn the key to the off position, and then to the accessory position. Test all functions of the installation for proper operation, before reassembling the dash.

Having difficulties? We're here to help.

Contact our Tech Support line at:
386-257-1187

Or via email at:
techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM
Saturday: 10:00 AM - 5:00 PM
Sunday: 10:00 AM - 4:00 PM

Metra recommends MECP certified technicians