



Data Interface

Fits Select GM Models 2014-2021

FEATURES

- Designed for non-amplified systems or bypassing a factory amplifier
- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides NAV outputs (parking brake, reverse, speed sense)
- NOT pre-wired for Axxess SWC interface
- Designed for vehicles without, or not retaining, OnStar[®]
- Retains factory chimes
- Retains all warning chimes through onboard speaker
- Retains balance & fade
- Provides illumination output
- High-level speaker input
- Micro "B" USB updatable
- Can be used with extension harness AXEXH-GM09

www.MetraOnline.com

MetraOnline.com may be used to assist with dash assembly instructions. Simply enter your Year, Make, Model vehicle into the vehicle fit guide and look for the Dash Kit Installation Instructions.



COMPONENTS

- AXDI-GMLN9 interface
- LD-LCLAN-09 harness

TABLE OF CONTENTS

Applications	2
Connections LD-LCLAN-09.....	3
Installation	4
Programming.....	4

TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Cutting tool
- Tape
- Crimping tool
- Connectors (i.e. butt-connectors, bell caps, etc.)

Visit AxxessInterfaces.com for more detailed information about the product and up-to-date vehicle specific applications

ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product. **NOTE:** Refer also to the instructions included with the aftermarket accessory before installing this device.

APPLICATIONS

CHEVROLET


Camaro	2016-2018	105/106
Cheyenne	2014-2019	
Colorado	2015-2018	105/106
Cruze (GEN II)	2016-2016	
Equinox.....	2018-2018	105/106
Malibu	2016-2017	
Silverado.....	2014-2018	
Spark	2016-2017	
Suburban.....	2015-2021	
Tahoe	2015-2020	
Traverse.....	2018-2018	105/106
Trax	2017-2020	IP1

GMC

Canyon	2015-2018	105/106
Sierra.....	2016-2018	
Sierra 2500/3500	2015-2015	
Terrain	2018 2018	105/106
Yukon.....	2015-2020	

The RPO code is located in the Service Parts Identification sticker

CONNECTIONS: LD-LCLAN-09 DIAGRAM

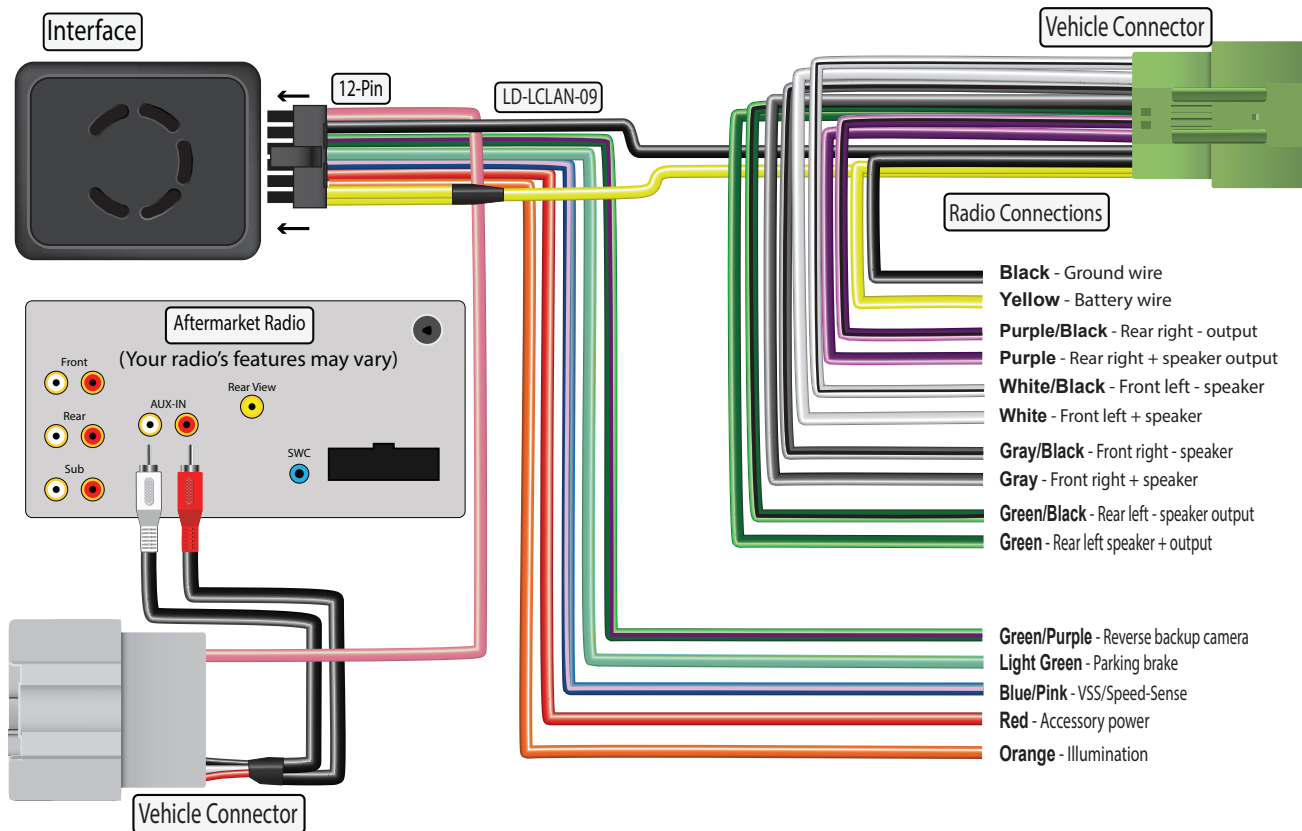



AXDI-GMLN9

INSTALLATION INSTRUCTIONS

INSTALLATION

With the key in the off position:

- Connect the **LD-LCLAN-09** harness into the interface, and then to the wiring harness in the vehicle.

PROGRAMMING

Attention! If the interface loses power for any reason, the following steps will need to be performed again. If installing an Axxess SWC interface, connect it after you initialize and test the interface/radio, with the key in the off position.

- Turn the key (or push-to-start button) to the ignition position and wait until the radio comes on.

Note: If the radio does not come on within 60 seconds, turn the key to the off position, disconnect the interface, check all connections, reconnect the interface, and then try again.

- Turn the key to the off position, and then to the accessory position. Test all functions of the installation for proper operation, before reassembling the dash.

Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**