



COMPONENTS

- AXDI-SP1 interface
- LD-AX-XSVI-SP1 harness
- LD-AX-XSVI-SP2 harness

APPLICATIONS

Dodge

Sprinter (Sound 5 radio) 2007-2009
Sprinter (Sound 20 radio) 2007-2009

Mercedes

Sprinter (Sound 5 radio) 2010-2013

Data Interface Fits Select Dodge/Mercedes Models **2007-2013**

FEATURES

- Designed for non-amplified systems
- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides NAV outputs (parking brake, reverse, speed sense)
- Pre-wired for Axxess SWC interface (sold separately)
- High-level speaker input
- Micro “B” USB updatable

TABLE OF CONTENTS

Connections.....	2-3
LD-AXVI-SP1 DIAGRAM.....	2
LD-AXVI-SP2 DIAGRAM.....	3
Installation.....	4
Programming.....	4


TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Crimping tool and connectors, or solder gun, solder, and heat shrink • Tape • Wire cutter
- Zip ties

Visit AxxessInterfaces.com
for more detailed information about the product
and up-to-date vehicle specific applications


ATTENTION: With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product. **NOTE:** Refer also to the instructions included with the aftermarket accessory before installing this device.

CONNECTIONS: LD-AXVI-SP1 DIAGRAM

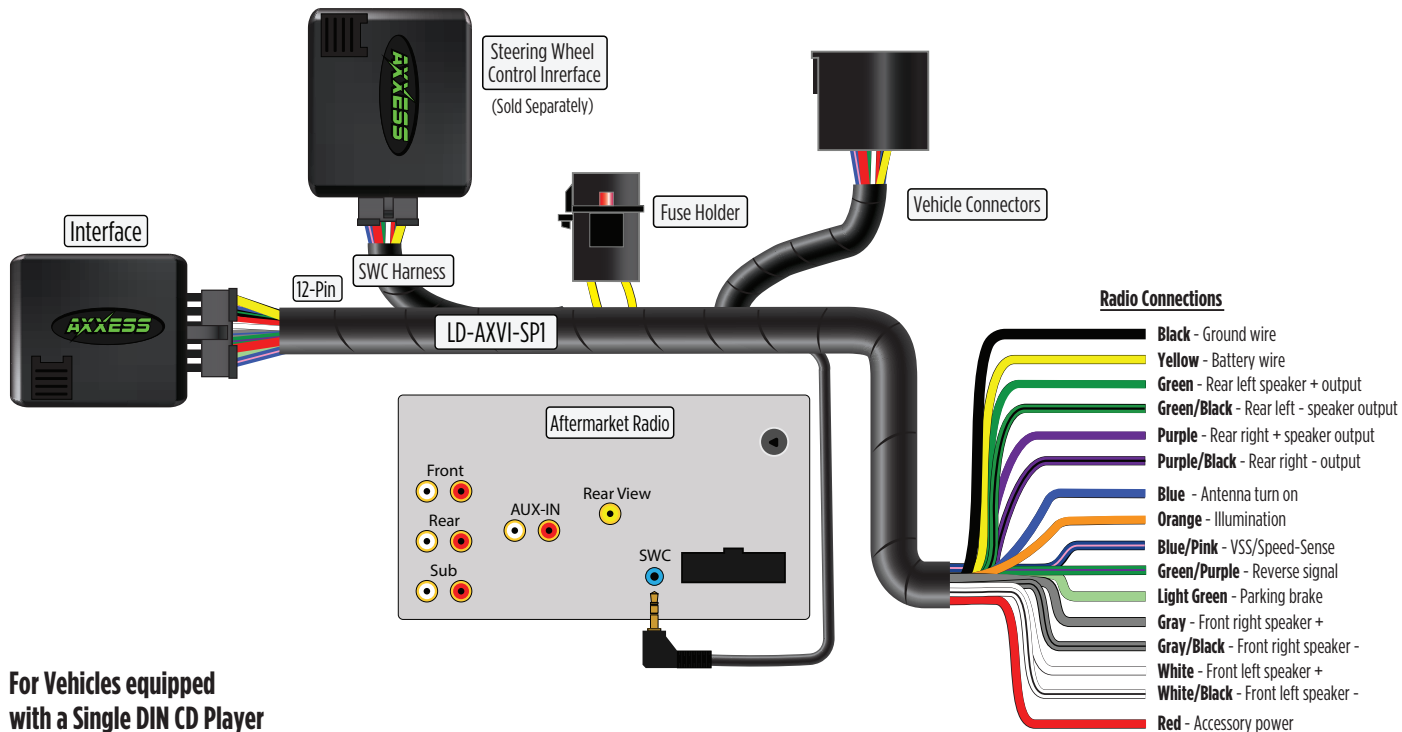

For Vehicles equipped
with a Single DIN CD Player

CONNECTIONS: LD-AXVI-SP2 DIAGRAM

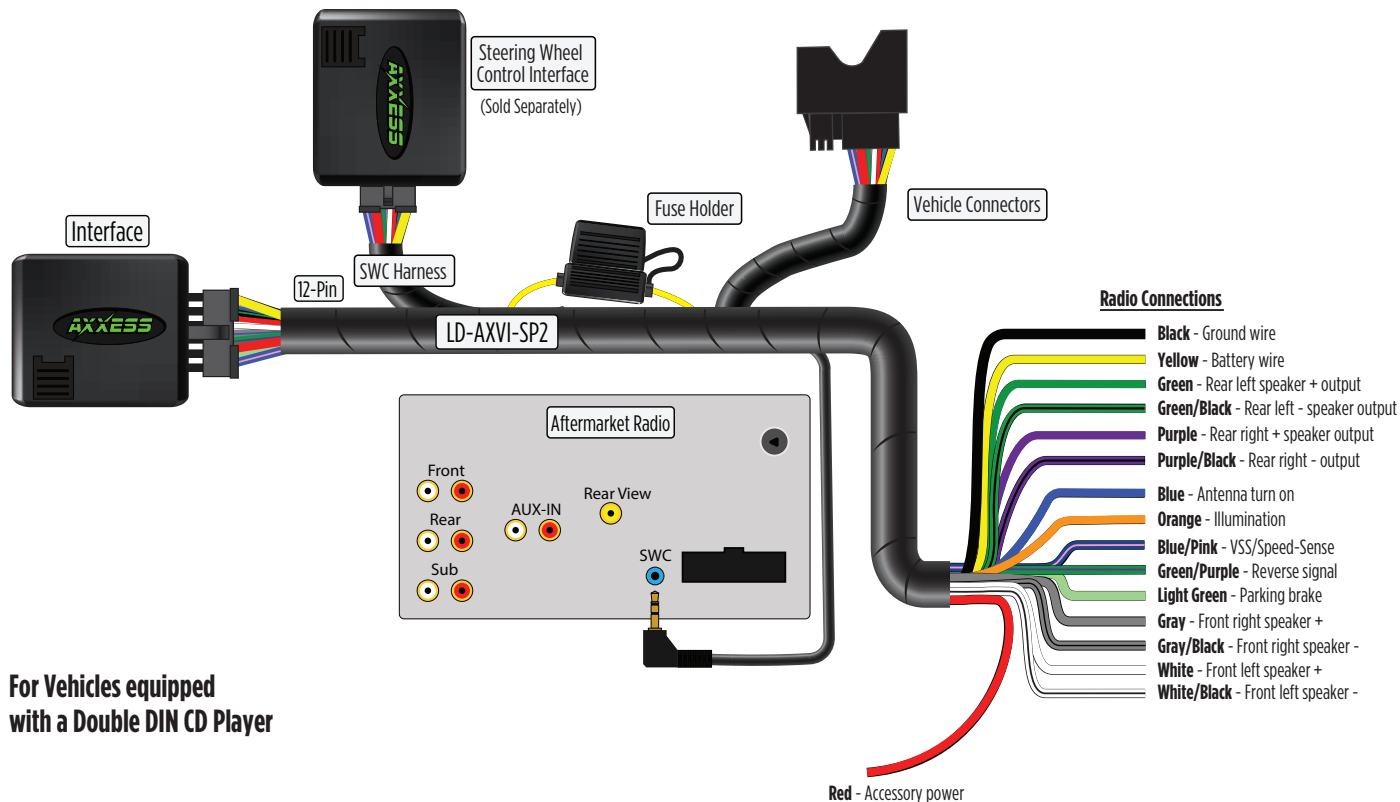

**For Vehicles equipped
with a Double DIN CD Player**



AXDI-SP1

INSTALLATION INSTRUCTIONS

INSTALLATION

With the key in the off position:

- Connect the **LD-AX-XSVI-SP1** or **LD-AX-XSVI-SP2** harness into the interface, and then to the wiring harness in the vehicle.

PROGRAMMING

Attention! If the interface loses power for any reason, the following steps will need to be performed again. If installing an Axxess SWC interface, connect it after you initialize and test the interface/radio, with the key in the off position.

- Turn the key (or push-to-start button) to the ignition position and wait until the radio comes on.

Note: If the radio does not come on within 60 seconds, turn the key to the off position, disconnect the interface, check all connections, reconnect the interface, and then try again.

- Turn the key to the off position, and then to the accessory position. Test all functions of the installation for proper operation, before reassembling the dash.

Note: If using the Axxess SWC interface, connect it after you initialize the **AXDI-SP1**, with the key in the off position.

Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP
certified technicians**