Data Interface
Fits Select Volkswagen Models **2015-2019**

FEATURES

- Designed for non-amplified systems or bypassing a factory amplifier
- Provides accessory power (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- Provides NAV outputs (parking brake, reverse, speed sense)
- Pre-wired for Axxess SWC interface (sold separately)
- 48" leads for remote tuner location
- Retains factory backup camera if equipped
- Retains balance & fade
- Micro "B" USB updatable

COMPONENTS

- AXDI-VW2 interface
- LD-XSVI-9006NAV harness

APPLICATIONS

Volkswagen

Beetle	2016-2019	Passat	2016-2018
Golf	2015-2016	Tiguan	2016-2017
Jetta	2016-2019		

TABLE OF CONTENTS

Visit **AxxessInterfaces.com** for more detailed information about the product and up-to-date vehicle specific applications
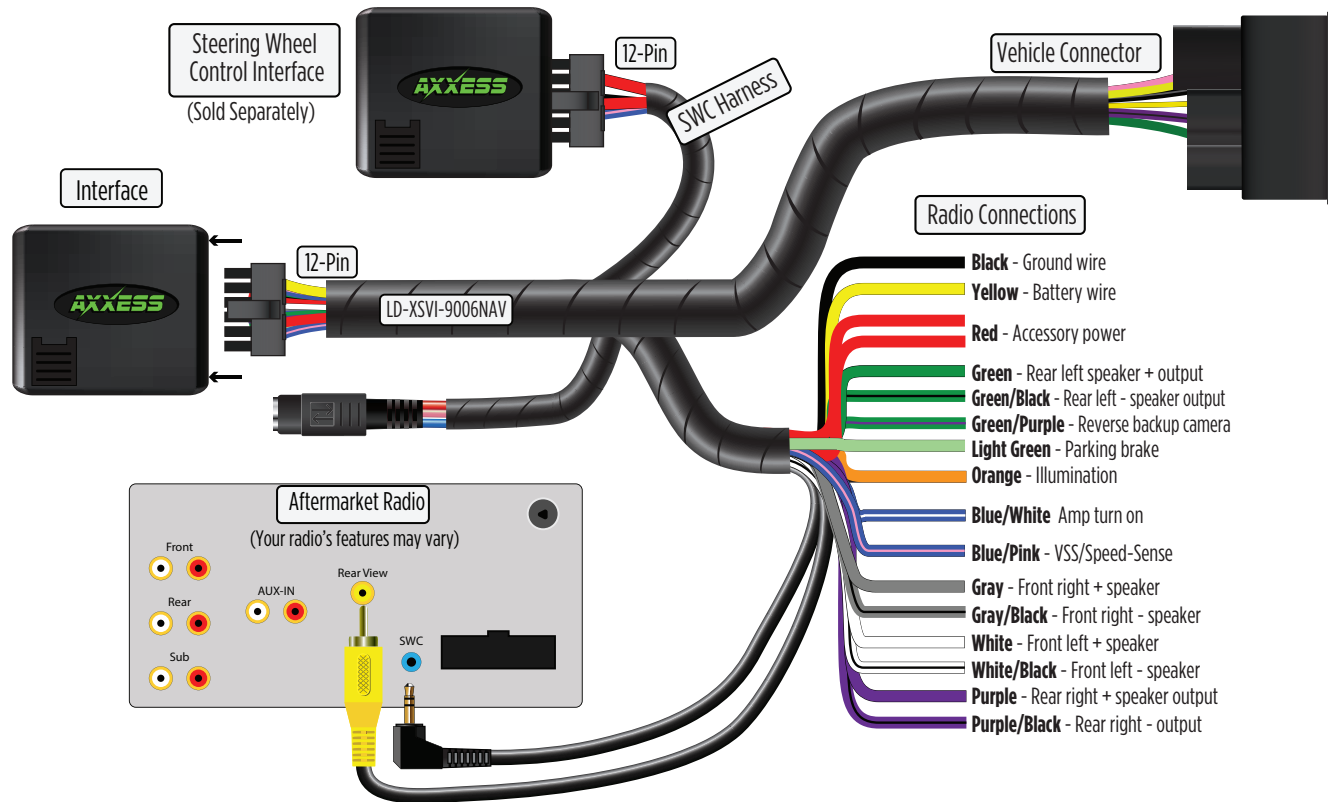
TOOLS REQUIRED

- Crimping tool and connectors, or solder gun, solder, and heat shrink • Tape • Wire cutter
- Zip ties

ATTENTION: *With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections, especially the air bag indicator lights, are plugged in before reconnecting the battery or cycling the ignition to test this product.*
NOTE: *Refer also to the instructions included with the aftermarket radio.*

Steering Wheel Control Interface
(Sold Separately)

AXXESS

12-Pin

SWC Harness

Vehicle Connector

Interface

AXXESS

12-Pin

LD-XSVI-9006NAV

Radio Connections

Black - Ground wire
Yellow - Battery wire
Red - Accessory power
Green - Rear left speaker + output
Green/Black - Rear left - speaker output
Green/Purple - Reverse backup camera
Light Green - Parking brake
Orange - Illumination
Blue/White Amp turn on
Blue/Pink - VSS/Speed-Sense
Gray - Front right + speaker
Gray/Black - Front right - speaker
White - Front left + speaker
White/Black - Front left - speaker
Purple - Rear right + speaker output
Purple/Black - Rear right - output

Aftermarket Radio
(Your radio's features may vary)

Front
Rear
Sub
AUX-IN
Rear View
SWC

INSTALLATION

With the key in the off position:

1. Connect the **AXDI-VW2 harness** into the interface, and then to the wiring harness in the vehicle.

   Note: The harness will connect to the harness removed from the disc drive located in the glove box for remote tuner applications.

2. If an **Axxess SWC Interface** (sold separately) will be used, do not connect it until the interface is programmed and fully functional.

PROGRAMMING

Attention! If the interface ever loses power, the following steps will need to be performed again. Please ensure that the owner of the vehicle knows this.

1. Turn the key (or push-to-start button) to the ignition position and wait until the radio comes on.

   Note: If the radio does not come on within 60 seconds, turn the key to the off position, disconnect the interface, check all connections, reconnect the interface, and then try again.

2. Turn the key (or push-to-start button) to the off position, then to the accessory position. Test all functions of the installation for proper operation, before reassembling the dash.

Having difficulties? We're here to help.

Contact our Tech Support line at:
386-257-1187

Or via email at:
techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM
Saturday: 10:00 AM -5:00 PM
Sunday: 10:00 AM - 4:00 PM

MECP
MOBILE ELECTRONICS
CERTIFIED PROFESSIONAL

**Metra recommends MECP
certified technicians**