



### Porsche (with M.O.S.T. 25 amplifier) Data Interface with SWC 2004-2009

#### INTERFACE FEATURES

- Provides accessory power
- Retains R.A.P. (retained accessory power)
- Designed for amplified models
- Provides NAV outputs (parking brake, reverse, speed sense)
- Retains audio controls on the steering wheel
- Retains balance
- Micro-B USB updatable

#### INTERFACE COMPONENTS

- AXDIS-PO52 interface
- AXDIS-PO52 amplifier interface
- AXSWC interface
- AXDIS-PO52 harness
- AXSWC harness
- Female 3.5mm connector with stripped leads

#### APPLICATIONS

##### PORSCHE

911 (997)	2004-2009	Boxster (987)	2004-2009	Cayman (987c)	2004-2009
-----------	-----------	---------------	-----------	---------------	-----------

#### TABLE OF CONTENTS

Connections .....	2
Installation .....	3
Programming .....	3

#### TOOLS REQUIRED

- Wire cutter • Crimp tool • Solder gun • Tape
- Connectors (example: butt-connectors, bell caps, etc.)

#### Product Info



## CONNECTIONS

### From the aftermarket radio to the AXDIS-PO52 harness:

- Connect the **Black** wire to the ground wire.
- Connect the **Yellow** wire to the battery wire.
- Connect the **Red** wire to the accessory wire.
- If the aftermarket radio has an illumination wire, connect the **Orange** wire to it.
- Connect the **Blue** and the **Blue/White** wires to the amp turn-on wire.
- If a wire is populated on the factory side, connect the **Blue/White** wire with a bullet connector to the amp turn-on wire.

The following (3) wires are only for multimedia/navigation radios that require these wires.

- Connect the **Blue/Pink** wire to the VSS/speed sense wire.
- Connect the **Green/Purple** wire to the reverse wire.
- Connect the **Light Green** wire to the parking brake wire.
- Tape off and disregard the following (8) wires, they will not be used in this application:  
**Gray, Gray/Black, Green, Green/Black, Purple, Purple/Black, White, White/Black**
- Connect the **Red** and **White** RCA jacks to the front amplifier output jacks of the aftermarket radio.


### From the aftermarket radio to the AXSWC harness:

This harness is only to be used if the vehicle is equipped with steering wheel controls.

- Connect the **Red** wire to the accessory wire.

### Loose Black/Red wire:

1. Locate pin cavity 1 on the factory harness. If a wire is populated in the harness, push the **Black/Red** wire in the pin cavity and connect this wire to the amp turn-on wire from the aftermarket radio. (Figure A)

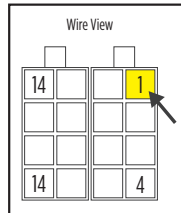

(Figure A)

- For the radios listed below, connect the *female 3.5mm connector with stripped leads*, to the male 3.5mm SWC jack from the AXSWC harness. Any remaining wires tape off and disregard:
  - **Eclipse:** Connect the steering wheel control wire, normally **Brown**, to the **Brown/White** wire of the connector. Then connect the remaining steering wheel control wire, normally **Brown/White**, to the **Brown** wire of the connector.
  - **Metra OE:** Connect the steering wheel control Key 1 wire (Gray) to the **Brown** wire.
  - **Kenwood or select JVC with a steering wheel control wire:** Connect the **Blue/Yellow** wire to the **Brown** wire.
  - **XITE:** Connect the steering wheel control SWC-2 wire from the radio to the **Brown** wire.
  - **Parrot Asteroid Smart or Tablet:** Connect the 3.5mm jack into the AXSWCH-PAR (sold separately), and then connect the 4-pin connector from the AXSWCH-PAR into the radio.  
**Note:** *The radio must be updated to rev. 2.1.4 or higher software.*
  - **Universal “2 or 3 wire” radio:** Connect the steering wheel control wire, referred to as Key-A or SWC-1, to the **Brown** wire of the connector. Then connect the remaining steering wheel control wire, referred to as Key-B or SWC-2, to the **Brown/White** wire of the connector. If the radio comes with a third wire for ground, disregard this wire.  
**Note:** *After the interface has been programmed to the vehicle, refer to the manual provided with the radio for assigning the SWC buttons. Contact the radio manufacturer for more information.*
- **For all other radios:** Connect the 3.5mm jack from the AXSWC harness, into the jack on the aftermarket radio designated for an external steering wheel control interface. Please refer to the aftermarket radios manual if in doubt as to where the 3.5mm jack goes to.

## INSTALLATION

### With the key in the off position:

- Connect the AXDIS-P052 harness to the AXDIS-P052 interface.
- Connect the AXDIS-P052 harness to the AXDIS-P052 amplifier interface.
- Remove the dust cover from fiber optic port in the AXDIS-P052 amplifier interface.
- Connect the factory fiber optic cable into the AXDIS-P052 amplifier interface.
- Connect the AXDIS-P052 harness to the wiring harness in the vehicle.
- Connect the AXSWC harness to the AXSWC interface, and then to the AXDIS-P052 interface.

## PROGRAMMING

- Press and hold the Volume-Up button on the steering wheel. For models with a scroll wheel, scroll up quickly.
- Turn the ignition on, the L.E.D. in the AXSWC interface will start flashing rapidly, which means the AXSWC is looking for the vehicle and the radio.

**Note:** If the L.E.D. did not start flashing rapidly, press the reset button for 3 seconds, while still holding the Volume-Up button.

- After a few seconds the L.E.D. should stop flashing rapidly, and then go out for about 2 seconds.
- After approximately 2 seconds there will be a series of 7 **Green** flashes, some short, and some long. The long flashes represent the wires that are connected to the AXSWC. The 3rd, 4th, 5th, and 6th flashes should be longer.

**Tip:** Knowing this will help to troubleshoot, if need be.

- The L.E.D. will pause for another 2 seconds, and then flash **Red** up to 18 times depending on which radio is connected to the AXSWC. Refer to the L.E.D. feedback section for information.
- This is the end of the auto detection stage. Release from holding the Volume-Up button. If the AXSWC detected the vehicle and the radio successfully, the L.E.D. will light up solid.
- Test the steering wheel controls for proper operation. Refer to the AXSWC instructions online at [axxessinterfaces.com](http://axxessinterfaces.com) for customizing the buttons, if so desired.

## PROGRAMMING (CONT.)

### L.E.D. feedback

The (18) **Red** L.E.D. flashes represent what brand radio the AXSWC believes it is connected to. Each flash represents a different radio manufacturer. For example, if you are installing a JVC radio, the AXSWC will flash (5) times. Following is a legend that dictates which manufacturer corresponds to which flash.

### L.E.D. feedback legend

1 flash - Eclipse (Type 1) †	10 flashes - Clarion (Type 2) †
2 flashes - Kenwood ‡	11 flashes - Metra OE
3 flashes - Clarion (Type 1) †	12 flashes - Eclipse (Type 2) †
4 flashes - Sony / Dual	13 flashes - LG
5 flashes - JVC	14 flashes - Parrot **
6 flashes - Pioneer / Jensen	15 flashes - XITE
7 flashes - Alpine *	16 flashes - Philips
8 flashes - Visteon	17 flashes - TBD
9 flashes - Valor	18 flashes - JBL

\* **Note:** If the AXSWC flashes **Red** (7) times, and you do not have an Alpine radio connected to it, that means the AXSWC does not detect a radio connected to it. Verify that the 3.5mm jack is connected to the correct steering wheel jack/wire in the radio.

\*\* **Note:** Part number AXSWCH-PAR is required (sold separately). Also, the Parrot radio must be updated to rev. 2.1.4 or higher through [www.parrot.com](http://www.parrot.com).

† **Note:** If you have a Clarion radio and the steering wheel controls do not work, change the radio type to the other Clarion radio type; same for Eclipse. The following section explains how to do this.

‡ **Note:** If you have a Kenwood radio and the L.E.D. feedback comes back as showing as a JVC radio, change the radio type to a Kenwood. Refer to the "Programming Information" document online.



# AXDIS-PO52

INSTALLATION INSTRUCTIONS

Having difficulties? We're here to help.



Contact our Tech Support line at:

**1-800-253-TECH**



Or via email at:

[techsupport@metra-autosound.com](mailto:techsupport@metra-autosound.com)

### Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



### **KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP  
certified technicians**