

GM Data Interface with SWC 2016-2019

INTERFACE FEATURES

- Provides retained accessory power (10-amp)
- Provides illumination, parking brake, reverse, and speed sense outputs
- Retains warning chimes through an onboard speaker
- Retains audio controls on the steering wheel
- Designed to be compatible with all major radio brands
- Auto detects vehicle type, radio connection, and preset controls
- Ability to dual assign steering wheel control buttons
- Retains memory settings even after battery disconnection or interface removal (non volatile memory)
- Designed for non-amplified models, or when bypassing a factory amplifier
- Retains balance and fade
- Micro-B USB updatable

APPLICATIONS

See inside front cover

TABLE OF CONTENTS

Connections	2
Programming	3
Troubleshooting	4

INTERFACE COMPONENTS

- AXTC-LN10 interface
- AXTC-LN10 harness
- 3.5mm adapter

TOOLS & INSTALLATION ACCESSORIES REQUIRED

- Crimping tool and connectors, or solder gun, solder, and heat shrink
- Tape
- Wire cutter
- Zip ties

Product Info



APPLICATIONS

Chevrolet

Camaro (1)	2016-2018
Colorado (1)	2017-2018
Cruze (2)	2016-2018
Cruze Hatchback (2)	2016-2018
Equinox (1)	2018
Malibu (2)	2016-2018
Silverado 1500 LD (1)	2019
Silverado 1500 (1)	2016-2018
Silverado 2500 HD (1)	2016-2019
Silverado 3500 HD (1)	2016-2019
Trax (2)	2017

GMC

Acadia (1)	2017-2018
Canyon (1)	2017-2018
Sierra 1500 Limited (1)	2019
Sierra 1500 (1)	2016-2018
Sierra 2500 HD (1)	2016-2019
Sierra 3500 HD (1)	2016-2019

(1) IOB code radio †


(2) IOA code radio †

† The IOA/IOB code can be found in the **Service Parts Identification Label** located:

- **Glove box** – Acadia/Canyon/Colorado/Cruze/Equinox/Silverado/Sierra
- **Rear compartment floor** – Camaro/Malibu
- **Underneath spare tire** – Trax


Note: Newer model GM vehicles are transitioning to a QR style label. If the **Service Parts Identification Label** is not located where listed, reference the **Vehicle Certification Label** on the inside of the driver's door opening for the QR code.


CONNECTIONS

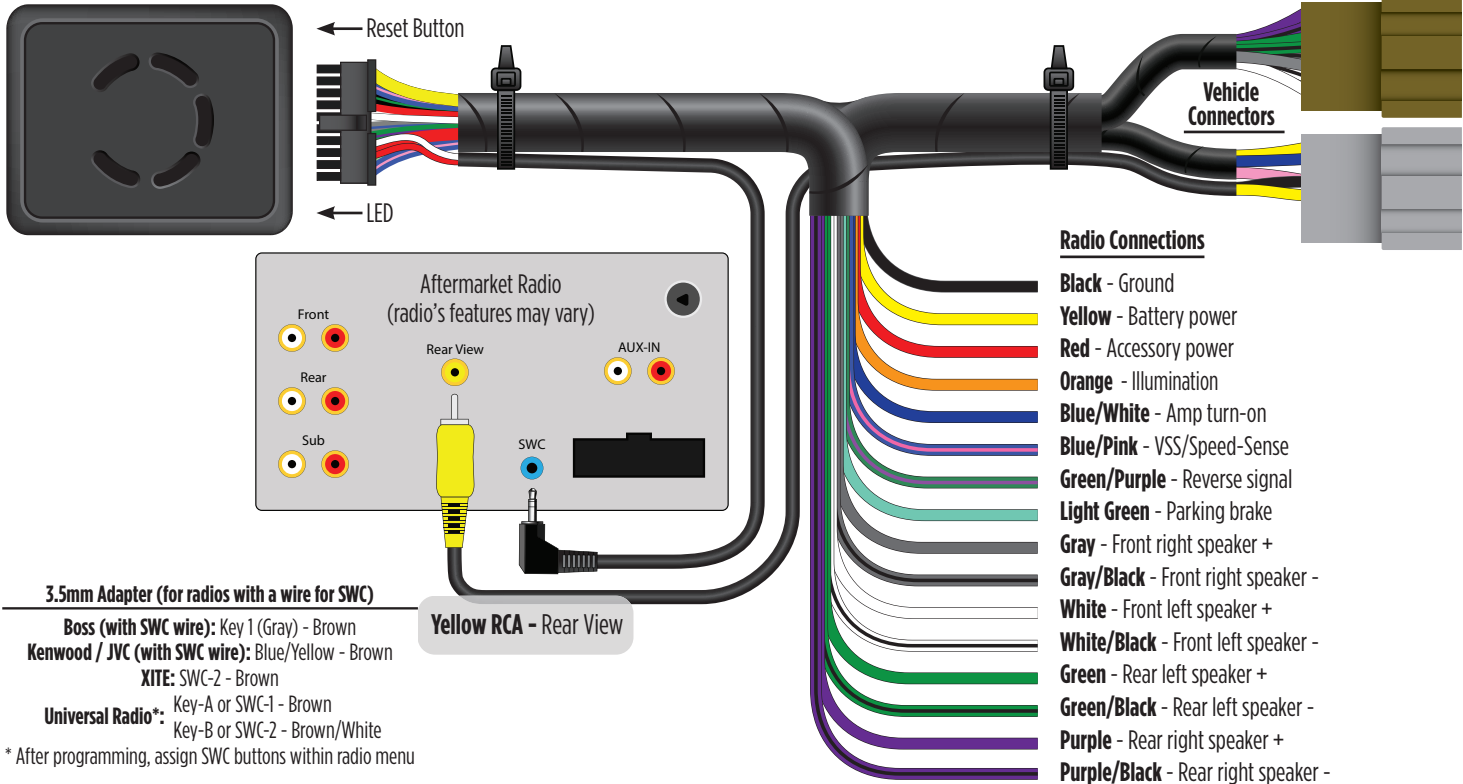



* After programming, assign SWC buttons within radio menu


PROGRAMMING


- 


1. Open the driver's door, and keep open during the programming process.
- 


2. Cycle the ignition on.
- 

3. Connect the **AXTC-LN10 harness** to the **AXTC-LN10 interface**, and then to the wiring harness in the vehicle.
- 

4. Tap the **Volume Up** button on the the steering wheel. Program the interface by tapping the **Volume Up** button until the LED stops flashing.
- 

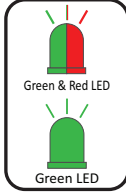5. The LED will flash **Green & Red** while the interface programs the radio to the steering wheel controls. Once programmed, the LED will go out, then produce a pattern which will identify the radio type installed. Refer to the **Radio LED Feedback** section under **Troubleshooting** for radio types.
- 

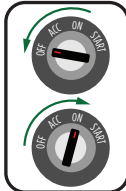
6. The LED will go out, then once again quickly flash **Green & Red** while the interface programs itself to the vehicle. Once programmed, the LED will go out again, then turn solid **Green**.
- 

7. Cycle the ignition off, then back on.
- 

8. Test all functions of the installation for proper operation.

TROUBLESHOOTING

1. If the interface fails to function, press and release the reset button, then repeat the programming process from step 4 to try again.

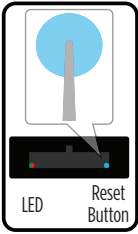

2. **Final LED Feedback**

At the end of programming the LED will turn **Solid Green** which indicates programming was successful. If the LED didn't turn **Solid Green**, reference the list below to understand which programming section the problem may stem from.

LED Light	Radio Programming Section	Vehicle Programming Section
Solid Green	Pass	Pass
Slow Red Flash	Fail	Pass
Slow Green Flash	Pass	Fail
Solid Red	Fail	Fail

Note: If the LED shows **Solid Green** for **Pass** (indicating everything programmed correctly), yet the steering wheel controls don't work, make sure that the 3.5mm jack is plugged in, and plugged into the correct jack in the radio. Once corrected, press the reset button, then program again.

QR Code Scan Here



Further troubleshooting steps and information can be located at:

axessinterfaces.com/product/AXTC-LN10



AXTC-LN10

INSTALLATION INSTRUCTIONS

Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**